

Crease depth and accuracy adjustment instructions for PermaJet Creasing Device



Unscrew the black handle and fully remove it



Undo the screws each end which hold the creasing bar cover



Again undo the screws on the other side of the cover



Once undone, carefully lift the cover until completely removed



Use a spanner to turn the adjusters at each end of the bar - clockwise = lighter crease, anti-clockwise = deeper crease. Test a sheet of paper and keep adjusting until you are happy and the bar is level



Once adjusted, re-attached the cover, do up the cover screws and re-attach the black handle. Some thicker card may require more adjustments for a good crease as they vary in resistance